

3. Trailer Positioning System Instructions

- Coming Spring 2020

Trailer positioning instructions:


When in the Remote Control blocks you will see traffic lights on the RCYCs.

The traffic lights are only activated when the crane is positioned over the stack and the operator has confirmed your vehicle registration.

These will help you align the trailer to the correct position of the RCYC / stack.



4. Safety on the Port

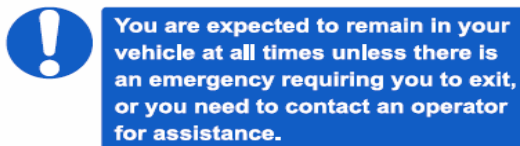

In the event of an emergency you should sound your horn continuously and contact the emergency services on 01394 604300

Failure to comply with these instructions may result in you being asked to leave the Port or for repeat offences potentially being banned from the Port.



Remote Control Yard Crane (RCYC).

Haulier Information Leaflet



The Port of Felixstowe has introduced Remote Control Yard Cranes (RCYCs). This leaflet will help drivers identify:

- What they need to know
- What they need to do; and
- What they will see within these areas.

If you have any queries regarding this Leaflet please contact CUSTOMER SERVICES: **01394 604060**



STAY IN YOUR CAB

1. Before you arrive at the Port

In order for the RCYCs to know trucks have arrived in the blocks, each truck will need an RFID tag attached to both the driver and passenger window.



We advise that these tags are requested and fitted prior to arrival at the Port. Upon arrival, if RFID tags have not been fitted please follow the instructions as printed on your gate slip— see below:

Gate slip	** EXAMPLE ONLY **
Port of Felixstowe CSC Phone: 01394 604060	
Reg No:	REG1
VBS No:	111111
Rhides No:	123435
Date:	16/03/2020
Time:	09:00
TO ACCESS THE REMOTE CONTROLLED BLOCKS VEHICLES MUST HAVE RFID TAGS INSTALLED. PLEASE PROCEED VIA LNG-THA AND FOLLOW THE SIGNS TO THE RFID INSTALLATION AREA TO RECEIVE TAGS TO BE FITTED BY YOU. THANK YOU	

Provided the truck is already fitted with RFID tags then the gating process remains unchanged. However, if your delivery/collection is in the remote control areas the gate slip will include a warning against the location as per below:

LNG C768**

**** CAUTION:** This location is operated by automated/remotely controlled yard cranes. Please stay in your cab and observe safety precautions at all times.


2. Whilst on the Port

The Remote Control Area is currently within blocks A to E on Berths 8 & 9 (stacks 758-802). On the entrance and exits to these blocks you will see antennas that are responsible for reading the RFID tag on your windows




When entering and when within the Remote Control blocks, ensure your windows are fully wound up/closed and stay in your cab at all times


The RCYCs have yellow markings and LED signs on the legs.

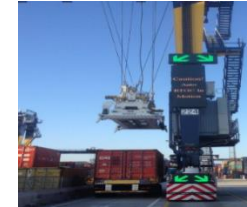

GREEN LED ARROWS:
The RCYC is Stationary -
It is safe to proceed to your destination

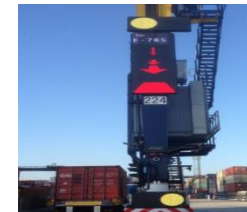

RED LED ARROW:
Yard Crane Moving –
Proceed with Caution

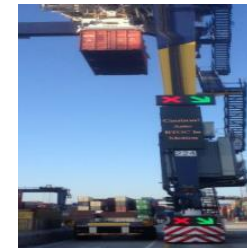

RED LED CROSS:
Suspended Load –
DO NOT DRIVE UNDER
YARD CRANE

Within the blocks, when the RCYCs are approaching your location, please ensure your driver side window is fully wound up.

The RCYC will need to overshoot your location for the antenna to read the tag on your window, and then return to the location of the container. Please do not move unless instructed to do so!